

Installation Instructions

### PRODUCT DESCRIPTION

### GD00Z-8-GC Overview

- A garage door opener remote command transceiver with built-in Z-Wave technology.
- · Allows remote operation of a garage door opener using Z-Wave controllers.
- Acts as a Z-Wave repeater to improve communications within the Z-Wave mesh

#### GD00Z-8-GC Summary of Operation

- . GD00Z-8-GC connects to the garage door opener's pushbutton wall console terminals.
- A wireless tilt sensor mounts on garage door and reports door's position to GD00Z-8-GC.
- GD00Z-8-GC responds to Z-Wave commands from Z-Wave controllers to open or close the garage door.
- A warning indicator light flashes and a beeper sounds for 5 seconds before the door begins to move.
- If the door does not completely open or close, a second open or close command can be sent after 30 seconds.
- If the door does not completely open or close after the second attempt, the GD00Z-8-GC operation is suspended until a local garage door pushbutton is activated.

battery protection pull strip.

#### Z-Wave Information

- This is a Security enabled Z-Wave product and must be used with a Security enabled Z-Wave controller in order to fully utilize this product. As such, this device will not respond to Basic CC commands.
- ASSOCIATION: GD00Z-8-GC supports 1 Group with 1 Node, Group 1 must be assigned the Node ID of the controller to which unsolicited notifications from the GD00Z-8-GC will be sent. The Z-Wave controller should set this association automatically after inclusion.
- NOTIFICATION: GD00Z-8-GC supports the following notification types and events: Access Control (Type 0x06) with events 0x44 (HW failure), 0x45 (UL Lockout), 0x46 (Obstruction), 0x49 (Loss of Tilt Sensor) and 0x4A (Sensor Low Battery). And additional type. Home Security (0x07) is also supported with event 0x03 (Tilt Sensor
- GD00Z-8-GC can be inter-operated in any Z-Wave network with other Z-Wave devices from other manufacturers

#### S2 Security

- · Virtually impossible to hack.
- · Z-Wave hub must also support S2 Security. If hub does not support S2, device will operate using standard security.
- . Security 2 DSK label can be found on the bottom side of the product.

### **SAFETY NOTES**

## **WARNING** A

This operator system is equipped with an unattended operation feature. This door could move unexpectedly. NO ONE SHOULD CROSS THE PATH OF A MOVING DOOR!

## **▲** WARNING

This system can be installed on sectional type (roll up) doors only per (UL-325), DO NOT INSTALL ON ONE-PIECE DOORS!

# **WARNING**

The Remote Command Transceiver must be mounted in the garage, in sight of the garage door, where the visual and audible movement warning indicators can be clearly seen and heard.


## **▲** WARNING

Do not install the Remote Command Transceiver on garage door operators manufactured prior to 1993 (models without an operational safety beam entrapment detection system).

## PRODUCT COMPONENTS GD00Z-8-GC WARNING LIGHT STATUS **POWER INDICATOR** INPUT **JACK** LINK CONNECTION MOUNTING SCREWS AND ANCHORS FOR GD00Z-8-GC OPTIONAL **ADJUSTABLE** GD00Z-8-GC MOUNTING BRACKE SCREWS AND MOUNTING HARDWARE FOR ADJUSTABLE POWER SUPPLY **BRACKET** AND BRACKET SCREWS AND MOUNTING TAPE FOR TILT SENSOR


## TILT SENSOR INSTALLATION AND BATTERY To activate the tilt sensor, remove the

Attach the mounting plate to the top panel of the door. Snap the sensor onto the mounting plate. ARROWS ON PLATE & SENSOR POINT UP "IIP ARROWS BOTTOM Use double sided tape or the two mounting screws supplied (drill 1/16" pilot holes if required)

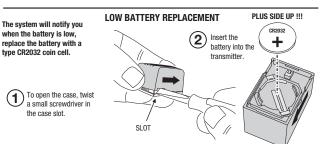

## PAIRING (INCLUDING) WITH THE SYSTEM

Note: Plug in the GD00Z-8-GC near your Z-Wave Controller for these steps

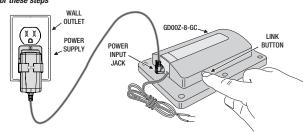

#### TO INCLUDE THE GD00Z-8-GC INTO YOUR CONTROLLER


- 1 Place your Z-Wave Controller into Discovery or Include mode.
- Press and release the link button on the GD00Z-8-GC.
- (3) Confirm that the GD00Z-8-GC was recognized by your Z-Wave Controller.

Refer to your Z-Wave Controllers instructions for additional information on including devices.

#### TO EXCLUDE THE GD00Z-8-GC INTO YOUR CONTROLLER

- 1 Place your Z-Wave Controller into Exclude mode.
- (2) Press and release the link button on the GD00Z-8-GC.
- (3) Confirm that the GD00Z-8-GC was excluded by your Z-Wave Controller.

Refer to your Z-Wave Controllers instructions for additional information on excluding devices.

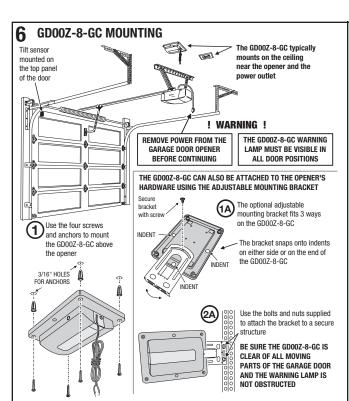


### **GD00Z-8-GC CONNECTIONS** (3) Carefully join the power supply with the bracket Plug the power cord into the power input iack on the GD00Z-8-GC (4) Remove the screw from 120 VAC outlet faceplate. Plug in the adapter Secure the power adapter to the faceplate (1) Connect the GD00Z-8-GC connection wires to with the provided screw the push-button wall console terminals on the Feed the zip tie through the two holes in garage door opener. The terminals may be the bracket and secure named "PWC", "WC", "PB", "PUSHBUTTON", DO NOT DISCONNECT ANY WIRES CURRENTLY or "RED and WHITE". Terminal names and CONNECTED TO THE GARAGE DOOR OPENER. locations vary by model. **USE WIRE TIES TO** Either wire can SECURE EXCESS WIRING connect to either AWAY FROM ALL MOVING PARTS OF THE GARAGE DOOR AND OPENER GARAGE DOOR OPENER 0

## 8 SYSTEM OPERATION

- Restore power to your Garage door opener.
- To synchronize the system, use the garage door opener's push-button to manually open and close the door.
- (3) Use the mobile app to control your garage door, view status and add your garage door control to automations and modes.

(For example, you can schedule your garage door to close nightly at sunset.)

- The GD00Z-8-GC will beep and flash for five seconds before the door moves.
- The GD00Z-8-GC will activate the door opener and open or close the garage door.
- The touchscreen or mobile app will show the new status of the door after the door completes its cycle.

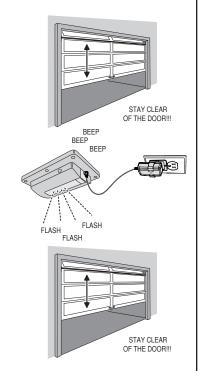

## **9** OPERATION NOTES

- The warning light will flash and the warning beeper will sound for five seconds before the door opener is activated. STAY CLEAR OF THE DOOR AND DOOR OPENER. THEY ARE ABOUT TO MOVE!
- If the door does not completely open or close after remote activation, the GD00Z-8-GC will allow user to try to operate the door one more time. If the second attempt fails, the GD00Z-8-GC will go into lock-out mode. See Note #3.
- If the GD00Z-8-GC is in lock-out mode and will not accept remote commands, activate the door from the pushbutton wall console.
- 4. Once the GD00Z-8-GC has initiated the movement of the garage door, another command cannot be sent for 30 seconds. This eliminates the chance of "bouncing" the garage door and possibly damaging the garage door opener.

"bouncing" the garage door and possibly damagi		
Power Supply: perating Temperature: Audible Alarm: Strobe: Communications:	Specifications Input: 120 VAC, 0.35 A Output: 12 VDC, 1 A -4°—122° F (-20°—50° C) 45 db @ 10 feet 360 Lumens Z-Wave (908.4 MHz) Screws and anchors to the ceiling, or bracket to the	NOTICE T LITHIUM CONTA WHICH SPI www.dts
	opener's hanging hardware  pecifications Type CR2032 Coin Cell Battery	KEEP AW

Range: 100 ft. line-of-sight to GD00Z-8-GC

mounting screws

Operating Temperature: -4°—122° F (-20°—50° C)

Communications: Proprietary 345 MHz

Mounting to Garage Door: Double-sided tape or two

Battery Life: 24 Months (typical)

(Specifications subject to change without notice)

NOTICE TO USERS IN CALIFORNIA - CR COIN CELL LITHIUM BATTERY INFORMATION: THIS PRODUCT CONTAINS A CR COIN CELL LITHIUM BATTERY WHICH CONTAINS PERCHLORATE MATERIAL - SPECIAL HANDLING MAY APPLY - SEE www.dtsc.ca.gov/hazardouswaste/perchlorate

KEEP AWAY FROM SMALL CHILDREN. IF BATTERY IS SWALLOWED, PROMPTLY SEE A DOCTOR. DO NOT TRY TO RECHARGE THIS BATTERY. DISPOSAL OF USED BATTERIES MUST BE MADE IN ACCORDANCE WITH THE WASTE RECOVERY AND RECYCLING REGULATIONS IN YOUR AREA.

## 10 TROUBLESHOOTING

The GD00Z-8-GC

activated but the

The tilt sensor

received by the

GD00Z-8-GC.

signal is not being

flashes and

beeps when

door does not

move

#### POSSIBLE CAUSE **PROBLEM** CORRECTIVE ACTION GD007-8-GC Reset the GD00Z-8-GC by pressing the LINK Unable to include was not properly button 5 times. A guick beep followed by a in Z-Wave excluded from a longer beep will indicate the reset. Reset should only be used in the case of a network. previous Z-Wave missing or inoperative primary controller. network. 2. Make sure that there are no obstacles The GD00Z-8-GC preventing the door from moving. flashes and Obstruction 3. Make sure that the GD00Z-8-GC connection wires are connected to the proper terminals beeps when blocking the on the garage door opener. Trace the wires activated but the door or incorrect from the garage door opener's pushbutton door does not wiring. wall console to the door opener. This is where the GD00Z-8-GC connection wires should be move connected. 1. Pair the tilt sensor with the GD00Z Garage

- Pair the tilt sensor with the GD00Z Garage Door Controller.
  - a. Press and hold the pair button on the side of the GD00Z-8-GC main unit for about 7 seconds. It will emit a short chirp.
  - Release the button.
  - Rotate the tilt sensor 90 degrees to trigger a transmission. A short chirp should be heard
  - d. If a short chirp is not heard, rotate the tilt sensor again.
- 2. Make sure the tilt sensor is mounted correctly on the garage door, with the arrow pointing up.
- 3. Make sure the battery pull tab has been removed from the tilt sensor.
- Replace the battery in the tilt sensor.

### NORTEK SECURITY & CONTROL LIMITED WARRANTY

This Nortek Security & Control product is warranted against defects in material and workmanship for twelve (12) months. This warranty extends only to wholesale customers who buy direct from Nortek Security & Control or through Nortek Security & Control's normal distribution channels. Nortek Security & Control does not warrant this product to consumers. Consumers should inquire from their selling dealer as to the nature of the dealer's warranty, if any. There are no obligations or liabilities on the part of Nortek Security & Control LLC for consequential damages arising out of or in connection with use or performance of this product or other indirect damages with respect to loss of property, revenue, or profit, or cost of removal, installation reinstallation. All implied warranties, including implied warranties for merchantability and implied warranty expires. This Nortek Security & Control LLC Warranty is in lieu of all other warranties express or implied.

All products returned for warranty service require a Return Product Authorization Number (RPA#). Contact Nortek Security & Control Returns at 1-855-546-3351 for an RPA# and other important details.

### REGULATORY NOTICES

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Les changements ou modifications non approuvés expressément par la partie responsable de la conformité pourrait annuler l'autorité de l'utilisateur à faire fonctionner l'équipement.

This equipment has been tested and found to comply with the limits for Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference are residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- · Reorient or relocate the receiving antenna
- · Increase the separation between the equipment and receiver
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This Class B digital apparatus complies with Canadian ICES-003.