

## Programming Instructions For *NICE* Transmitter (Remote) To *NICE* FLOX2R Receiver

- Step 1) Press and release the Yellow <u>Learn Button</u> on the receiver inside the Apollo Box *(see Figure 1).*The Red LED Indicator next to the Learn Button will turn on.
- While the red light on the receiver is turned on, **press and hold** the Primary Button on your 2 Button Transmitter **(see Figure 2)** until the light on the Receiver turns off, then release the Transmitter Button. Wait 1 second and then press and release the Primary Transmitter Button again. The receiver light will blink 3 times indicating the Transmitter is programmed. You are finished. Repeat these steps for programming additional Transmitters.

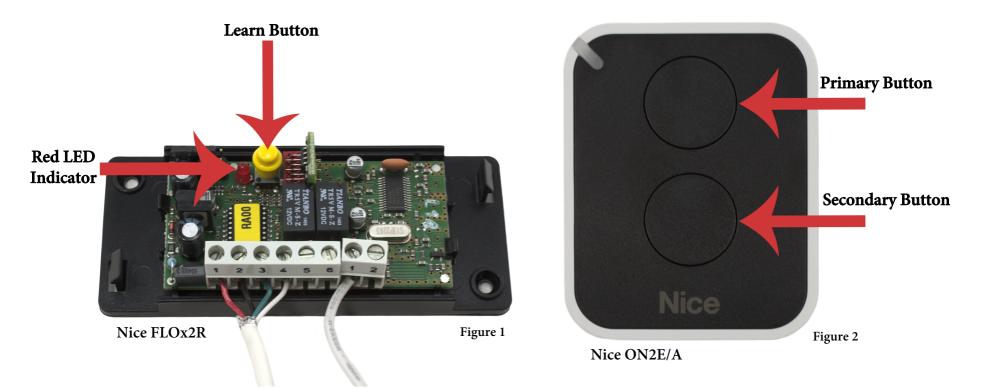

## Programming and Wiring Instructions For Secondary Button Used To Control Other Gate Within Close Proximity To Gate Controlled By Primary Button

Step 1) Remove the Green and White wires from terminal number 3 and 4 on the receiver (see Figure 1) and move them to terminal numbers 5 and 6 on the receiver (see Figure 3).

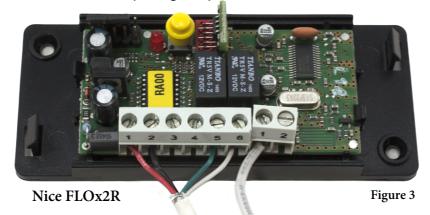


- Step 2) Press and release the Yellow <u>Learn Button</u> on the receiver inside the Apollo Box *(see Figure 1).*The Red LED Indicator next to the Learn Button will turn on.
- While the red light on the receiver is turned on, **press and hold** the Secondary Button on your 2 Button Transmitter **(see Figure 2)** until the light on the Receiver turns off, then release the Transmitter Button. Wait 1 second then press and release the Secondary Transmitter Button again. The receiver light will blink 3 times indicating the Transmitter is programmed. You are finished. Repeat these steps for programming additional Transmitters.


## Programming Instructions For *NICE* Transmitter (Remote) To *NICE* Plug In Receiver

Step 1) Press and hold the <u>Learn Button</u> (see Figure 1) on the receiver while plugged into control board.

Hold the Learn Button until the green LED Indicator next to the Learn Button turns on, then release the button.

Step 2) While the LED Indicator is still turned on, press and hold any button on the transmitter *(see Figure 2)* until the LED Indicator emits 3 green flashes, confirming successful programming.

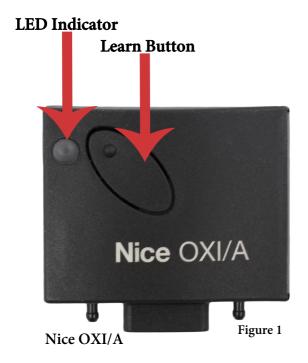

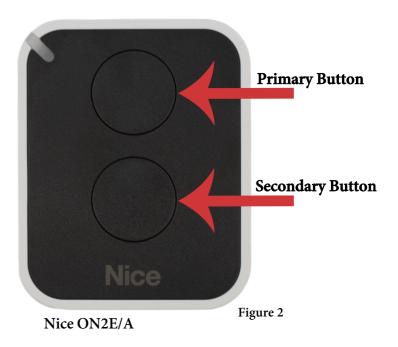



www.ApolloGateOpeners.com Phone: 800.878.7829 Fax: 330.650.9004 sales@apollogateopeners.com